



This 6-button memory controller (Model# SKQ-29) replaces 2-button controller. It needs new control box DYH-014. If your control box is DYH-08B, please note that DYH-014 can't be mounted in the same mounting holes.



Mount in the same location with cable ties (Provided)



**IMPORTANT:**

Reset for DYH-08B control box is press/hold **DOWN** button **ONLY**

Reset for DYH-014 control box is press/hold **BOTH UP** and **DOWN** buttons until 000 starts blinking, then release the buttons. The desk will start moving -- first to the lowest position, then the highest position and finally stops in mid-height. The reset is complete when the desk current height 39 (+/- 1) is displayed.

You can preset up to 4 positions. Use **UP** and **DOWN** arrow buttons to move desk to your desired position. Press **M** plus one of the number buttons together for 1 to 3 seconds until displayed height starts blinking, and then release the buttons. To go to your preset height, simply press the number button **TWICE** or press/hold the button.